


Installation Instructions

GL-RP

GL-RM

GL-RW

3/8" thick clear acrylic backer

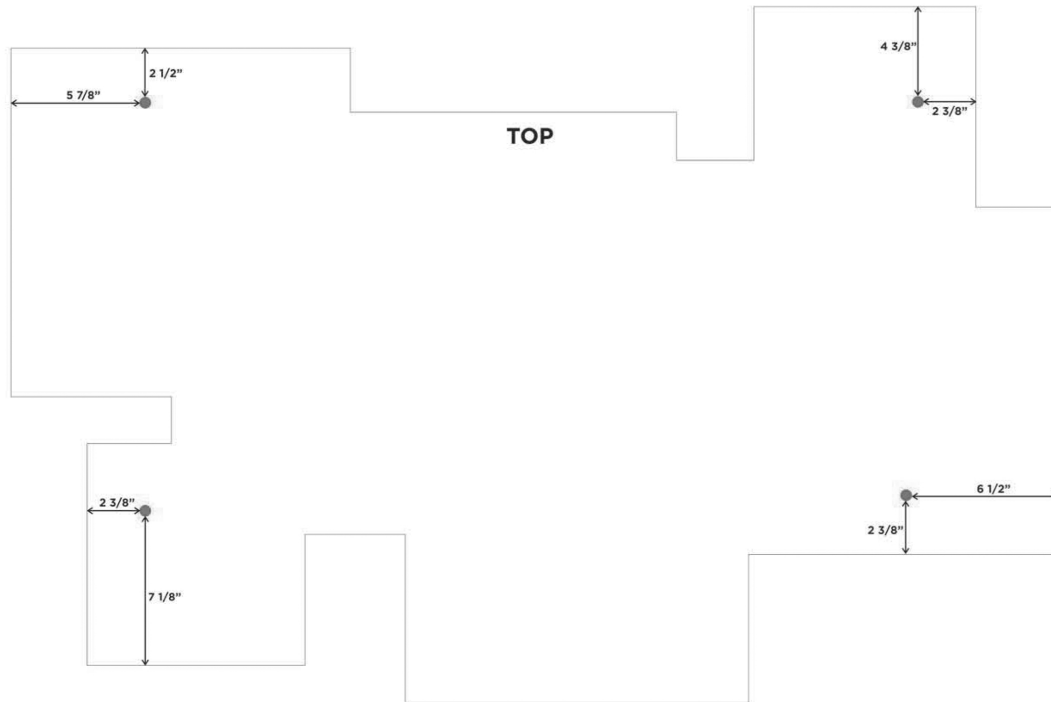

mounting pattern with 4 anchoring holes marked on clear acrylic backer only

In Drywall

tape pattern to wall in desired position and level. Drill small hole (1/8") in center of marked mounting pattern to test the hole making sure the drywall screws will not hit anything in the wall. Screw the supplied drywall anchors into the wall with the supplied hex tip (do not over tighten) hex tip. The posts are preset for the mounting blocks with the posts press to wall. Tighten the set screw on side of block with allen wrench.

